

NETWORK CAMERA

USER'S MANUAL



WARNING

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (OpenSourceGuide\OpenSourceGuide.pdf) or as a printed document included along with the User's Manual.

WEEE (Waste Electrical & Electronic Equipment)***Correct Disposal of This Product***

(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Important Safeguards

1. Read Instructions

All the safety and operating instructions should be read before the appliance is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Cleaning

Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.

4. Attachments

Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and/or Moisture

Do not use this equipment near water or in contact with water.

6. Placing and Accessories

Do not place this equipment on an wall or ceiling that is not strong enough to sustain the camera. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Do not place this equipment in an enclosed space. Sufficient ventilation is required to prevent an increase in ambient temperature which can cause malfunction or the risk of fire.

7. Power Sources

This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.

8. Power Cord

Operator or installer must remove power and TNT connections before handling the equipment.

9. Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

10. Overloading

Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

11. Objects and Liquids

Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.

12. Servicing

Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.

13. Damage requiring Service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or the plug has been damaged.
- B. If liquid is spilled, or objects have hit the equipment.
- C. If the equipment has been exposed to rain or water.
- D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- E. If the equipment has been dropped, or the cabinet damaged.
- F. When the equipment exhibits a distinct change in performance — this indicates a need for service.

14. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

15. Safety Check

Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

16. Field Installation

This installation should be made by a qualified service person and should conform to all local codes.

17. Correct Batteries

Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

18. Tmra

A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

Table of Contents

Chapter 1 — Introduction.....	1
1.1 In This Manual.....	1
1.2 Features.....	1
1.3 Typical Applications.....	2
Remote Monitoring.....	2
Remote Recording.....	2
Webcasting.....	3
Chapter 2 — Installation.....	4
2.1 Package Contents.....	4
2.2 Illustrated Parts List.....	4
Factory Reset.....	5
2.3 Mounting.....	6
Chapter 3 — Remote Setup.....	8
3.1 Quick Setup.....	9
3.2 System.....	9
General.....	9
Date/Time.....	10
User/Group.....	11
3.3 Network.....	12
IP Address.....	13
DVRNS.....	14
Port.....	15
Bandwidth Control.....	17
Security.....	18
IEEE 802.1X.....	19
3.4 Video.....	20
Camera.....	20
Streaming.....	21
Webcasting.....	22
MAT.....	23
3.5 Audio.....	24
Audio Input / Output.....	24
3.6 Event Action.....	25
Alarm Out.....	25
Email.....	26
Remote Callback.....	27
FTP Upload.....	28
Audio Alarm.....	29
3.7 Event.....	30

Alarm In	30
Motion Detection	31
Audio Detection	33
Video Blind	34
System Event	35
 Chapter 4 — Camera Module Setup	 36
4.1 Function	37
Home Function	37
Preset	37
Pattern	38
Scan	39
Tour	40
Run Function	41
4.2 Screen	41
Privacy Zone	42
North Direction	42
Zone Title	43
Camera Title	43
OSD Display	44
4.3 Camera	44
4.4 Data	46
4.5 Setup	46
 Chapter 5 — WebGuard	 48
 Appendix	 52
Map of Screens (Remote Setup)	52
Troubleshooting	53
Specifications	53
 Index	 55

Chapter 1 — Introduction

1.1 In This Manual

This manual is intended for users of the network camera and includes instructions for using and managing the camera on the network.

1.2 Features

This network camera compresses live video and transmits the video over Ethernet connections. The camera can be accessed, configured and managed by using the INIT (Integrated Network Installation Tool) program. It has a built-in web server, WebGuard, allowing you to monitor live video remotely using a web browser. The remote programs provided with the camera also allow remote management, monitoring and recording. This camera offers the following features:


- Dual stream for both live monitoring and recording or for live monitoring only
- H.264 and M-JPEG compression algorithm
- Four levels of video compression
- Two-way audio communication
- Pre- and post-event buffering and video stream buffering to enhance reliability of network recording
- Remote monitoring via web browser or remote software
- Automatic HTML code generation for webcasting on a user's website
- Up to 10 simultaneous connections to the camera for remote monitoring
- Enhanced security using IP address filtering, HTTPS, SSL and IEEE 802.1X functions and password protected multiple user levels
- Network bandwidth limit and MAT functions to use network bandwidth efficiently
- Convenient network connection using the UPnP (Universal Plug and Play) function and built-in mDNS (Multicast DNS) protocol
- Support of the ONVIF protocol (Core specification version 1.02)
- Convenient firmware upgrades via the network connection
- Firmware duplication and autorecovery functions to enhance system stability
- Management of multiple cameras via Ethernet connections
- Event detection functions: alarm-in, motion, audio, video blind
- RS485 interface for controlling PTZ
- NTSC or PAL video output

NOTES:


- Remote monitoring and recording through dual stream are available by using the RASplus and iNEX Basic programs provided with the camera.
- In this manual, a "remote system" refers to a PC that the remote program (RASplus, iNEX Basic or WebGuard) is running.


1.3 Typical Applications

Remote Monitoring

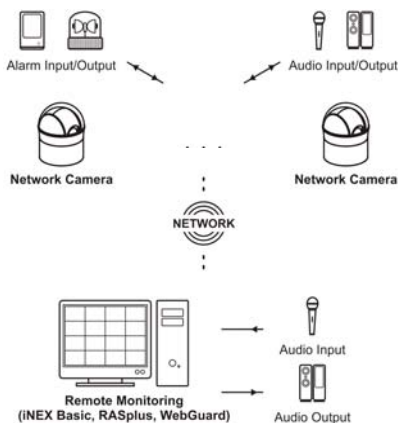

Remote Recording

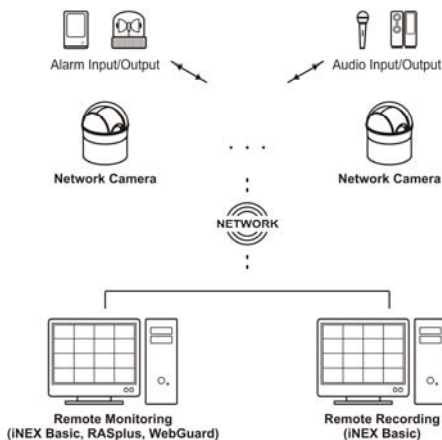

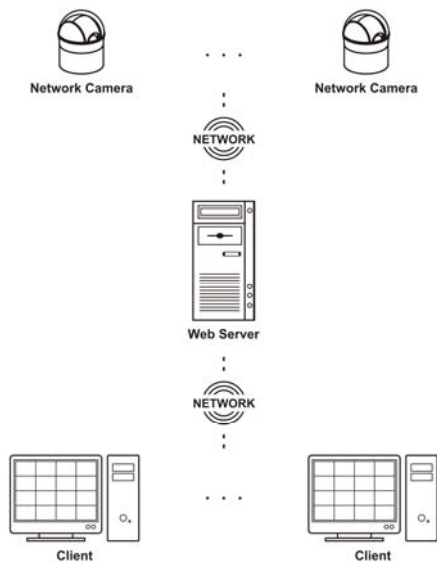
Webcasting

Chapter 2 — Installation


2.1 Package Contents

- Network Camera
- Installation CD (INIT, RASplus and iNEX Basic software, iNEX Basic User's Manual)
- User's Manuals (Camera, INIT, RASplus)
- Mount Kits


2.2 Illustrated Parts List

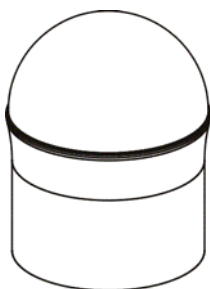

Dome Cover

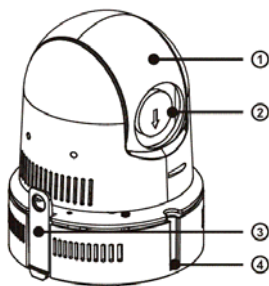

Body

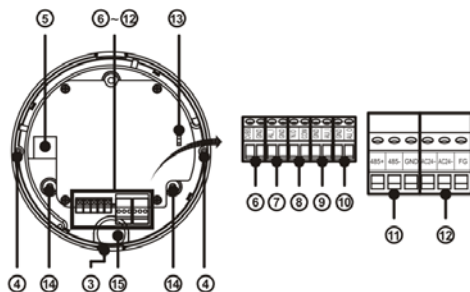

Bottom Cover

- ① Camera Module: Adjusts pan, tilt and zoom.
- ② Lens: Optical zoom lens is installed.
- ③ Hook: Connects the body to the bottom cover.

- ④ **Body Screw Hole:** Allows you to screw the body to the bottom cover.
- ⑤ **Network Port:** Connect a Cat5 cable with an RJ-45 connector. A network gender is provided with the camera for LAN extension. You can change the settings, manage the camera, upgrade the software or monitor video remotely via the network connection. Refer to the INIT User's Manual for details about network connection setup.
- ⑥ **Video Out (CVBS):** Connect to a monitor. It is intended to use for the purpose of video preview.
- ⑦ **Alarm Input:** Connect with an alarm-in device. Mechanical or electrical switches can be wired to the AI and GND connectors. The voltage range is from 0V to 5V. When the electrical switch is wired, the threshold voltage for NC (Normally Closed) is above 4.3V and for NO (Normally Open) is below 0.3V, and it should be stable at least 0.5 seconds to be detected.
- ⑧ **Alarm Output:** Connect an alarm-out device to the NO (Normally Open) and COM (Common) connectors. NO is a relay output which sinks 0.3A @ 125 VAC and 1A @ 30 VDC.
- ⑨ **Audio In:** Connect to an audio source (Line-in).
- ⑩ **Audio Out:** Connect to an amplifier (Line-out). The camera does not have amplified audio output, so you will need a speaker with an amplifier.
- ⑪ **RS485:** Connect to a RS485 communication device. Refer to the RS485 communication device manufacturer's manual for configuring the RS485 connection.
- ⑫ **Power In:** Connect to the power adapter (24 VAC).
- ⑬ **Factory Reset Switch:** Use to return all settings to the original factory settings. See below for details.
- ⑭ **Wall/Ceiling Mounting Hole:** Allows you to screw the camera to the wall or ceiling.
- ⑮ **Cable Entry Hole:** Allows you to draw cable out for connection to the power cord, alarm, audio and video out devices, and the network connector.

NOTE: Camera and audio surveillance may be prohibited by laws that vary by region. Check the laws in your area before using this product for surveillance purposes.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET. USE THE POWER CORD THAT HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES INTO ONE CIRCUIT.

Factory Reset


This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When performing a Factory Reset, you will lose any settings (except camera module settings) you have saved.

Cut off the power from the camera → Remove the bottom cover and set the factory reset switch to the **RESET** position → Turn on the power after connecting the body to the bottom cover. The camera resets to factory defaults and restarts after completing the factory reset → When the system restarts, cut off the power from the camera in about 5 minutes after the power is applied → Remove the bottom cover again and set the factory reset switch to the **OFF** position → Connect the body to the bottom cover → Turn on the system.

A factory reset also can be performed remotely by running the INIT program. The camera restarts after completing the factory reset. Refer to the INIT User's Manual for details on remote factory resetting.


2.3 Mounting

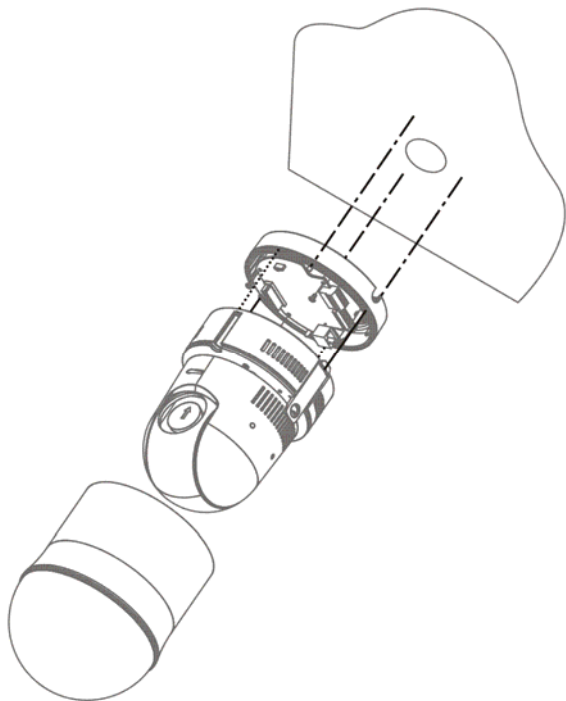


1. Screw the bottom cover to the wall or ceiling with mounting screws provided with the camera.
2. Screw the body to the bottom cover with screws provided with the camera.
3. Connect the dome cover to the bottom cover and turn the dome cover clockwise.
4. Connect external devices, network and power adapter.
5. Apply power.

WARNING: You might need to reinforce the wall or ceiling. If the wall or ceiling is not strong enough to support the camera, the camera might fall damaging the camera or causing injuries.

Chapter 3 — Remote Setup


Remote Setup allows you to change all settings of a camera. Run the INIT program, select a camera and click the Setup icon  on the Main screen. Select **Remote Setup** from the Setup menu and the Remote Setup screen appears. You can also display the Remote Setup screen by selecting a camera, clicking the right mouse button and selecting Remote Setup on the Main screen.

NOTE: You can also change the settings by using remote programs.

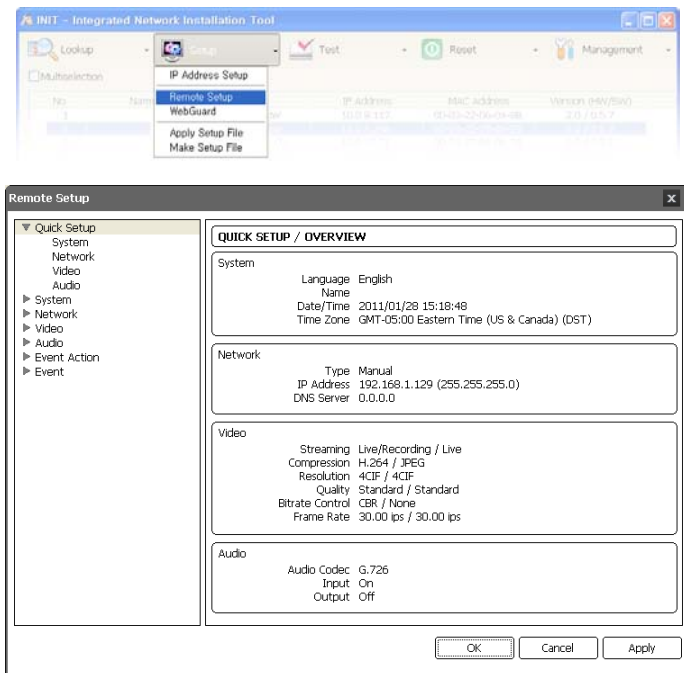


Clicking a menu on the left side of the Remote Setup screen displays the current settings for that menu on the right side of the screen. Clicking a submenu under each menu allows you to change the settings. Clicking the OK button closes the Remote Setup screen and applies the changes.

3.1 Quick Setup

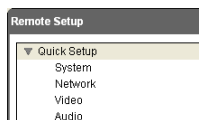


The Quick Setup allows you to change a camera's basic system, network, video and audio settings.

3.2 System

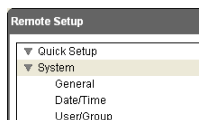

You can change a camera's system information, import or export all settings, and add users or groups.

General

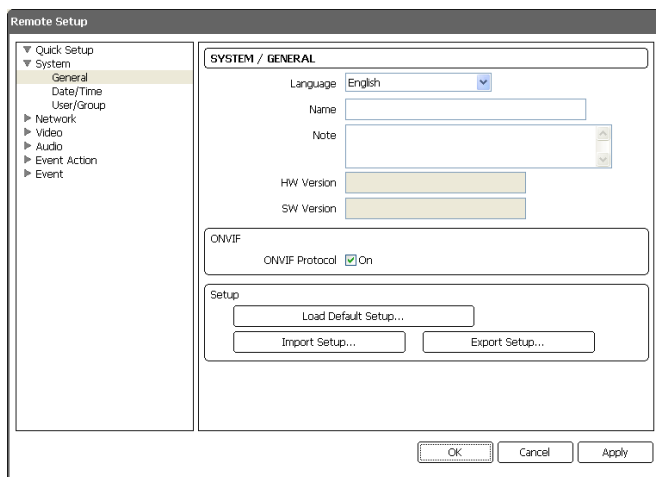

- **Language:** Choose the language to be used during remote setup.
- **Name:** Enter the camera name (up to 31 characters including spaces).
- **Note:** Enter additional information about the camera.
- **HW Version, SW Version:** These fields display the camera's hardware and software versions.

- **ONVIF Protocol:** Check the box to enable the ONVIF protocol. The ONVIF protocol is available only for users belonging to user groups of the ONVIF protocol (The default user ID is **admin** with no password).
- **Setup:**
 - **Load Default Setup...**: Click to return all except date/time and camera module settings to the original factory settings. You can select whether or not network settings will be included when the setup is applied. Refer to the **Network** setup for details of the network settings.
 - **Import Setup...**: Click to apply the settings saved as a .dat file format to the camera. A setup screen appears allowing you to select the setup file. You can select whether or not to include network settings (except DVRNS setting) when the setup is applied. Refer to the **Network** setup for details of the network settings.
 - **Export Setup...**: Click to save the current camera settings as a .dat file format. A setup screen appears allowing you to name the setup file.

NOTES:

- The *Load Default Setup* and *Import Setup* functions are permitted only to the users in the *Administrator* group.
- Do NOT check the *Include Network Setup* box when the network settings of the setup file are used in another camera. Otherwise, the connection to the camera might not be made properly.
- If the IP address, admin port number or SSL settings are changed during *Setup*, Remote Setup closes after saving the changes.

Date/Time

Remote Setup

- ▼ Quick Setup
- ▼ System
 - General
 - Date/Time**
 - User/Group
- ▶ Network
- ▶ Video
- ▶ Audio
- ▶ Event Action
- ▶ Event

SYSTEM / DATE/TIME

Date/Time

Date: 2010/09/14 Format: [v]
Time: 11:45:17 Format: [v]
Time Zone: GMT-05:00 Eastern Time (US & Canada) [v]
☒ Use Daylight Saving Time
[Apply]

Time Sync


☐ Automatic Sync
Time Server: [Text Field]
☐ Use DVRNS
Interval: 1 hr. [v]
☐ Run as Server

[OK] [Cancel] [Apply]

- **Date/Time:** Change the system date/time, date/time format and time zone. Turn daylight-saving time on or off by checking the box. Clicking the **Apply** button applies the changes immediately.
- **Time Sync**
 - **Automatic Sync:** Check the box to automatically synchronize the time with a time server. Enter the IP address or the domain name of the time server and set the time interval for synchronization. If the time server uses the DVRNS function, selecting the **Use DVRNS** box allows you to enter the name instead of the IP address or the domain name of the time server.
 - **Run as Server:** Check the box to run the camera as a time server.

NOTE: If you want to use a domain name instead of the IP address of the time server, the DNS server must be set up properly when setting *Network – IP Address*. If you want to use a name instead of the IP address or the domain name of the time server, the DVRNS function must be set up properly when setting *Network – DVRNS*.

User/Group

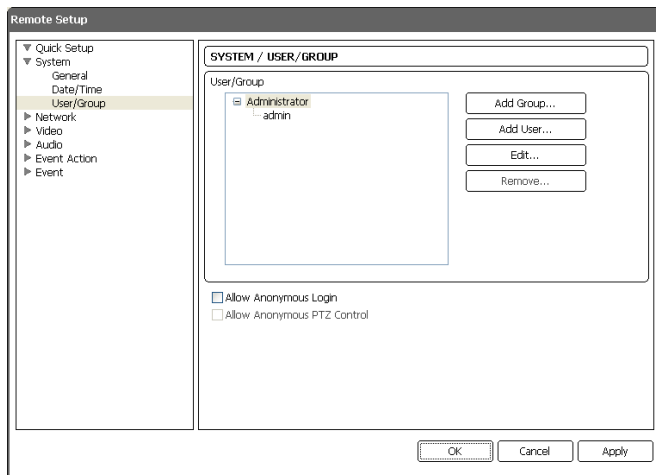


- **User/Group:** Click the buttons to change the settings for a group or a user allowed controlling the camera remotely.
 - **Add Group:** Click to add a group. Enter the group name and set authority levels for the group to control the camera remotely.
 - **Add User:** Click to add a user. Enter the user name and select the group that the user will belong to. Enter the password to be assigned to the user.
 - **Edit:** Select a group and click the button to change authority levels assigned to the group, or select a user and click the button to change the user's password.
 - **Remove:** Select a group or user and click the button to delete the group or user.

- **Allow Anonymous Login:** Check the box to use the webcasting feature. Refer to the [Video – Webcasting](#) setup for details.
- **Allow Anonymous PTZ Control:** Check the box to allow remote PTZ control on a website by using the webcasting feature.

NOTES:

- Only users belonging to the *Administrator* group can make *User/Group* changes.
- When connecting to the camera by using ONVIF protocol, the camera does not use this setting but uses the ONVIF protocol's setting (The default user ID is *admin* with no password when connecting to the camera by using ONVIF protocol).
- There is no default password for the *admin* user in the *Administrator* group.
- The default group (*Administrator*) cannot be edited or deleted.
- The authority levels that can be assigned are:
 - *Upgrade*: The user can upgrade the software.
 - *Setup*: The user can set up the system.
 - *Color Control*: The user can control brightness, contrast, hue and saturation for cameras.
 - *PTZ Control*: The user can control PTZ (Pan, Tilt, Zoom).
 - *Alarm-Out Control*: The user can reset the output during an alarm.
 - *System Check*: The user can view and check the remote system status.

3.3 Network

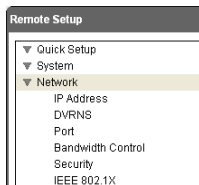

You can change the network settings, set up the DVRNS and security functions and control the network bandwidth.

IP Address

Remote Setup

▼ Quick Setup
▼ System
▼ Network

IP Address

DVRNS
Port
Bandwidth Control
Security
IEEE 802.1X

▶ Video
▶ Audio
▶ Event Action
▶ Event

NETWORK / IP ADDRESS

Type:

IP Address:

Gateway:

Subnet Mask:

DNS Server: ☐ From DHCP


OK Cancel Apply

- **Type:** Select the type of network configuration. Remote Setup closes after saving the changes.
 - **Manual:** Select when the camera is using a static IP address for network connection, and set up LAN parameters manually.
 - **DHCP:** Select when the camera is networked via DHCP (Dynamic Host Configuration Protocol). Click the OK button, and a temporary IP address is automatically assigned to the camera. The camera periodically will be issued a new IP address automatically.
 - **ADSL:** Select when the camera is networked via ADSL. Enter the ID and password for ADSL connection, and click the OK button. A temporary IP address is automatically assigned to the camera. The camera periodically will be issued a new IP address automatically.
- **DNS Server:** Enter the IP address of the DNS server. If you set up the DNS server, the domain name of the server can be used instead of the IP address during the DVRNS, time or SMTP server setup. Ask your Internet service provider for the IP Address of the DNS Server. When the camera is networked via DHCP, selecting **From DHCP** automatically assigns the IP address of the DNS server. The assigned IP address is displayed the next time it is connected.

NOTES:

- Ask your network provider for details about the network connection type and connection information for the camera or the IP address of the DNS server.
- If the camera is configured for a DHCP or ADSL network, it is best to use the DVRNS function because the camera IP address might change frequently.

DVRNS

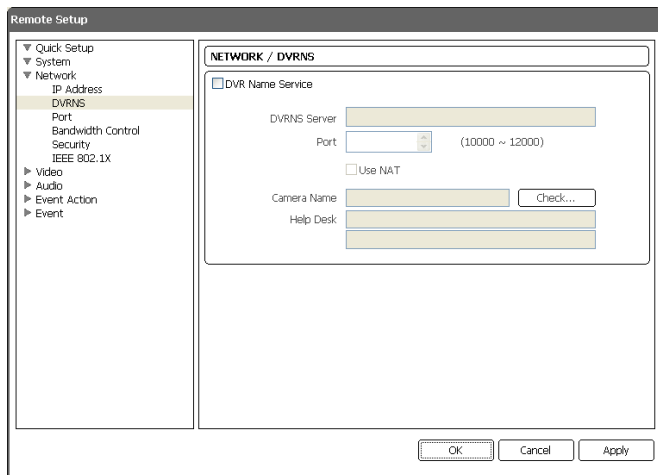

Check the **DVR Name Service** box to use the DVRNS function.

- **DVRNS Server:** Enter the IP address or domain name of the DVRNS server.
- **Port:** Set up the port number of the DVRNS server.
- **Use NAT:** Check the box when the camera uses a NAT (Network Address Translation) device for network connection.
- **Camera Name:** Enter the camera name to be registered on the DVRNS server. Check whether or not the name is available by clicking the **Check** button.
- **Help Desk:** Choosing the **OK** button registers the camera on the DVRNS server. Proper DVRNS settings will display the help desk information of the DVRNS server.

NOTES:

- The DVRNS (DVR Name Service) function allows the camera to use dynamic IP addresses for remote connection. When using this function, you can access the camera remotely by using the camera name instead of its IP address. For the DVRNS function to work properly, the camera should be registered on the DVRNS server, and the DVRNS server settings in the INIT program for the camera should match the settings registered on the DVRNS server. Any changes on the DVRNS server might cause improper operation.
- When LAN settings are changed, set up the DVRNS settings after saving your LAN changes by clicking the **OK** button.
- You will need to get the IP address or domain name of the DVRNS server from your network administrator. You can use the domain name instead of IP address if you set up the DNS server during the IP Address setup.

NOTES:

- When using a NAT (Network Address Translation) device, refer to the NAT manufacturer's instructions for the proper network settings.
- The camera name you entered in the *DVR Name* field should be checked by clicking the *Check* button, otherwise the DVRNS changes will not be saved. When entering no name or a name already registered on the DVRNS server, an error message displays. If a camera name includes the #, \, or % characters, connections to the camera using a WebGuard program might fail.

Port

Remote Setup


NETWORK / PORT

	Use	Port	Range
Admin	<input checked="" type="checkbox"/>	8200	(8000 ~ 12000)
Watch	<input checked="" type="checkbox"/>	8016	(8000 ~ 12000)
Record	<input checked="" type="checkbox"/>	8017	(8000 ~ 12000)
WebGuard	<input checked="" type="checkbox"/>	80	(10 ~ 14000)
RTSP	<input checked="" type="checkbox"/>	554	(1 ~ 65535)

☐ Use HTTPS

☒ Use UPnP

- **Use, Port:** Check the box to enable and enter the port number. Admin, Watch and Record ports are set to use by default and you cannot change it. Checking the WebGuard or RTSP box allows you to connect to the camera by using the WebGuard program or media players, such as VLC Player, supporting RTSP (Real-Time Streaming Protocol) service. Remote Setup closes after saving the changes (Admin port number only).
- **Use HTTPS:** Check the box to enhance the security of WebGuard pages by using the HTTPS protocol when running the WebGuard program.
- **Use UPnP:** Check the box to connect to the camera without manually setting up port forwarding on the NAT device when the camera uses a NAT (Network Address Translation) device for network connection. The UPnP function must also be enabled in the NAT device for this function to work. Refer to the NAT device User's Manual for details on enabling the UPnP function in the NAT device. Clicking the *Check* button checks the current port settings. A success message is displayed if all the current port numbers are available, and recommended port numbers are displayed if any of the current port numbers are not available.

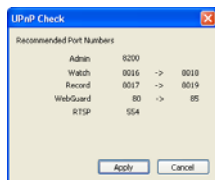

Clicking the **Apply** button applies the recommended port numbers.


NOTES:

- Do NOT use the same port number for more than one function. If you do, the camera cannot be connected with the remote programs.
- You can access the camera and monitor live video images using media players, such as VLC Player, supporting RTSP service. You should open all ports for UDP protocol or an RTSP port for TCP protocol if the camera uses a NAT (Network Address Translation) device for network connection or if the firewall is enabled. This function might not be supported, depending on the type of media player, and some media players might not play video properly depending on network conditions or compression or resolution of images for streaming. You can access video as follows:
 - Access from a PC: Start the media player and enter "*rtsp://ID:Password @IP address: RTSP port number/track ID=stream number*"
 - Access from mobile devices: Start web browser on the mobile device and enter "*http://IP address:WebGuard port number*" (*https* instead of *http* if the *Use HTTPS* box is checked). For this connection to work, the WebGuard and RTSP port numbers must be set up properly.

CAUTIONS:

- When changing the port settings, you must change the port settings on remote programs too.
- When using the HTTPS protocol, the ONVIF protocol might not work.

Bandwidth Control

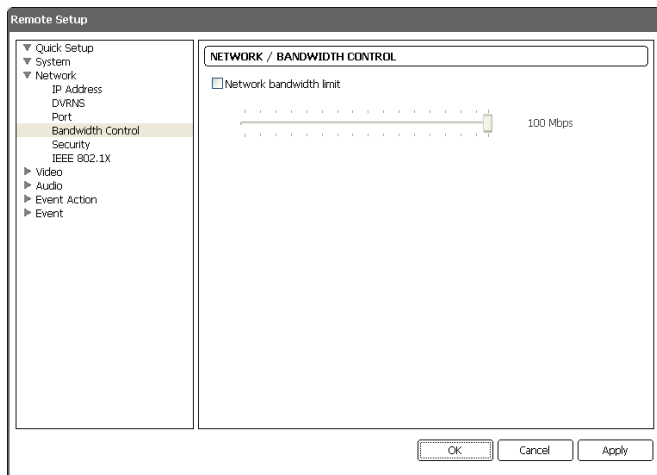


You can control the network bandwidth by limiting the network bandwidth of the camera depending on the network traffic.

Check the **Network bandwidth limit** box and set the desired maximum bandwidth. When the network is busy with traffic, the camera cannot use more than the maximum bandwidth.

NOTE: When limiting the network bandwidth, the frame rate might decrease to lower than the frame rate set during the *3.4 Video – Streaming* setup.

Security

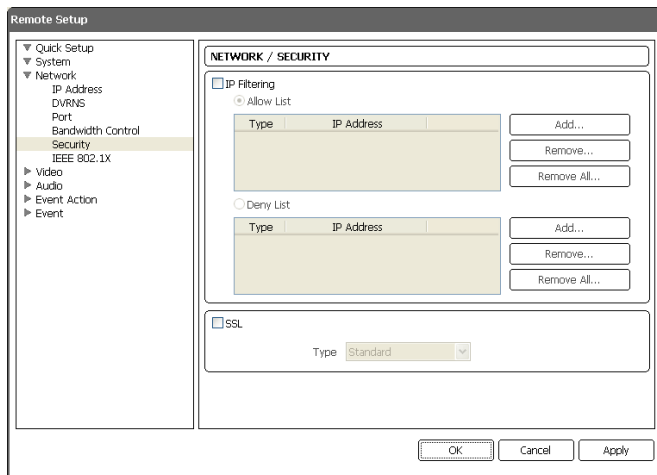

- **IP Filtering:** Check the box to use the IP filtering function. You can allow or block connections to the camera by designating IP addresses.
 - **Add:** Click the button to add IP addresses to the **Allow List** or **Deny List** to allow or block connection to the camera. Selecting the **Host** option allows you to add one IP address at a time. Selecting the **Group** option allows you to add continuous IP address numbers in one action by designating a range of IP addresses to add.
 - **Remove, Remove All:** Click the button to remove the selected IP address or all IP addresses from **Allow List** or **Deny List**.
- **SSL:** Check the box to use the SSL function. You can enhance the security of outgoing data from the camera by using the SSL (Secure Sockets Layer) protocol. When using the SSL function, the camera cannot be connected with a program or a system that does not support the SSL function. Remote Setup closes after saving the changes.

NOTES:

- If you want to use the time synchronization, DVRNS and Email sending functions, the connection of the IP addresses of the time server, DVRNS server and the SMTP server must be allowed when you set up the IP filtering function. Any connection to the camera from the IP address in *Deny List* will NOT be allowed.
- Using the SSL function might cause congestion in the system receiving data from the camera depending on the security level.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

IEEE 802.1X


The screenshot shows the 'Remote Setup' window with a sidebar on the left containing a tree view of configuration options: Quick Setup, System, Network, IP Address, DVRMS, Port, Bandwidth Control, Security, IEEE 802.1X (selected), Video, Audio, Event Action, and Event. The main area is titled 'NETWORK / IEEE 802.1X' and contains a checkbox for 'IEEE 802.1X'. Below this is a 'Certificates' section with three rows: 'CA Certificate' (No CA certificate uploaded.), 'Client Certificate' (No client certificate uploaded.), and 'Client Private Key(and ce...)' (No private key uploaded.). Each row has an 'Upload...' button. Below the certificates is a 'Settings' section with four fields: 'EAP Type' (EAP-MD5), 'EAPOL Version' (1), 'EAP Identity' (empty), and 'EAP Password' (empty). At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.

Check the IEEE 802.1X box to use the IEEE 802.1X network connection authentication function.

- **Certificates:** Uploads a certificate or private key for network connection depending on the authentication type. Entering a private key password might be required depending on the authentication type.
- **Settings:** Sets up EAP (Extensible Authentication Protocol).
 - **EAP Type:** Select the type of authentication to be used for network connection authentication. The authentication type must be identical to the authentication type that the authentication server uses.
 - **EAPOL Version:** Select the EAP version.
 - **EAP Identity, EAP Password:** Enter the ID and password for the authentication.


NOTE: For the IEEE 802.1X network connection authentication function to work properly, the authentication server and AP should support the IEEE 802.1X authentication.

3.4 Video

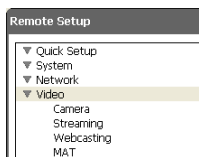

You can set up camera setting and features for streaming, webcasting and MAT.


Camera

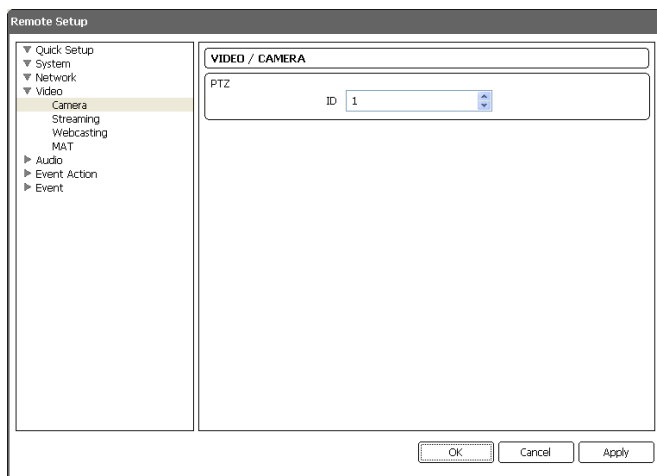

Assign an RS485 ID to the PTZ camera.

NOTE: When you control a PTZ camera via RS485 connection, the control device should be connected to the RS485 port properly. See *Chapter 2 – Installation, 2.2 Illustrated Parts List, Cable Assembly* and the device manufacturer's manual for configuring the RS485 connection.


Streaming

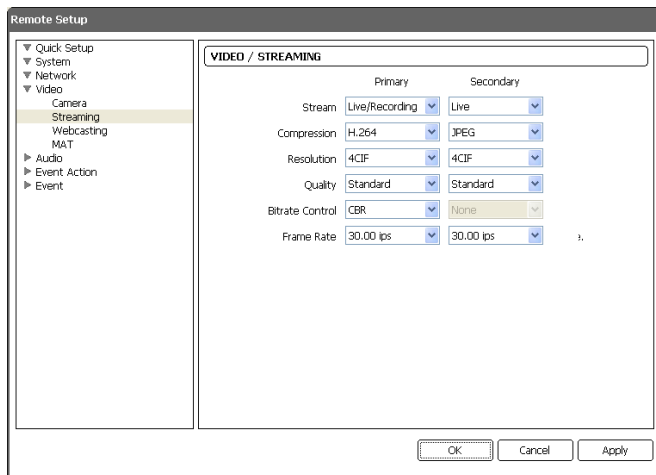

- **Primary, Secondary:** The camera supports dual stream video. The secondary stream setting is dependent on the primary stream setting. When in the dual stream mode, the resolution and quality settings of the secondary stream will be used during event actions (FTP upload and image attachment to Emails).
- **Stream:** Select the stream usage.
 - **Live/Recording:** Allows simultaneous live monitoring and recording. This is supported only in one of the streams.
 - **Live:** Allows live monitoring only.
- **Compression:** Set up the compression of images for streaming. The primary stream supports only H.264 compression and the secondary stream supports only M-JPEG compression.
- **Resolution:** Set the resolution of images for streaming. A maximum of 4CIF resolution is supported, and the resolution of the secondary stream cannot exceed that of the primary stream.
- **Quality:** Set up the quality of images for streaming.
- **Bitrate Control:** Set up the bitrate control mode for H.264 compression.
 - **CBR (Constant Bitrate):** Maintains the current bitrate regardless of the amount of motion.
 - **VBR (Variable Bitrate):** Adjusts the bitrate dynamically based on the amount of motion. The less motion there is, the less network congestion and the less storage consumption. The quality may not be as good when compared to the CBR mode.
- **Frame Rate:** Set the frame rate of images for streaming. The frame rate of the secondary stream cannot exceed that of the primary stream.

NOTES: Simultaneous connections to the camera might cause the frame rate to decrease due to the network bandwidth overload.


Webcasting

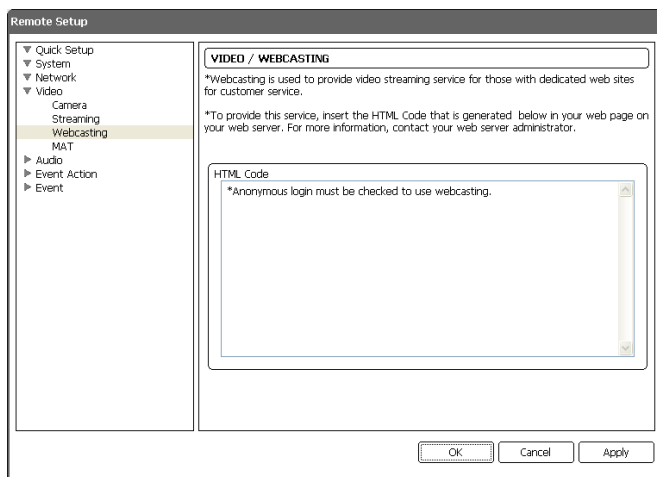

The camera can stream live video from the camera to a website. Copy the HTML Code displayed on the screen and paste it in your web page code.

NOTE: To use the webcasting service, you must check the *Allow Anonymous Login* option during 3.2 *System – User/Group* setup.

MAT

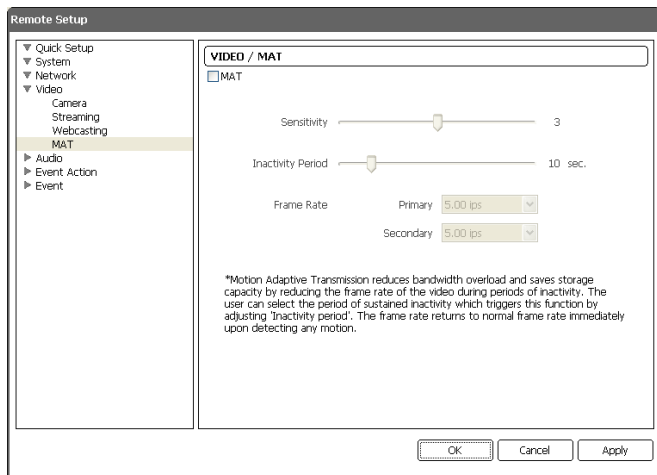


Check the **MAT** box to use the MAT (Motion Adaptive Transmission) function for video streaming and recording.

- **Sensitivity:** Set the motion sensitivity. The higher the number is, the more sensitive it is.
- **Inactivity Period:** Set the inactivity period. The camera will transmit or record images in **Frame Rate** set below until any change is detected after the inactivity period when no motion is detected during the preset inactivity period.
- **Frame Rate:** Select the frame rate to be applied when no motion is detected. The frame rate of the secondary stream cannot exceed that of the primary stream, and the frame rates supported for the secondary stream change depending on the frame rate of the primary stream. The selected frame rate will be applied until any motion is detected after the inactivity period and will return to the normal frame rate set during the **Stream** setup immediately upon detecting any motion.


NOTE: The MAT (Motion Adaptive Transmission) function allows you to reduce bandwidth overload and to save storage capacity by reducing the frame rate when no motion is detected. The camera considers that no motion is detected when no change is detected between two consecutive images based on the sensitivity setting.

3.5 Audio

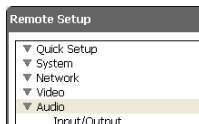

You can set up audio in and out.


Audio Input / Output

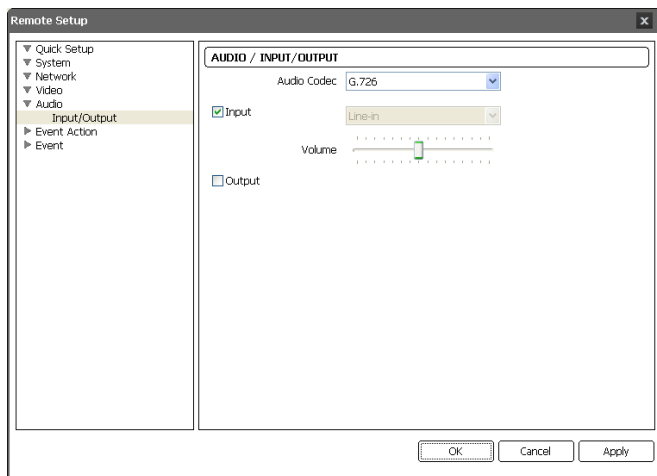

- **Audio CODEC:** Select an audio codec.
- **Input:** Check the box to enable audio in and select the proper audio-in device. You can also adjust the volume.
- **Output:** Check the box to enable audio out.


NOTE: The camera does not have amplified audio output, so you need to use a speaker with an amplifier.

3.6 Event Action

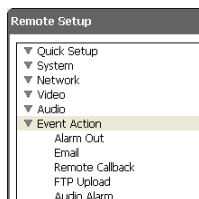

You can set up event actions to be taken when the camera detects events.

Alarm Out

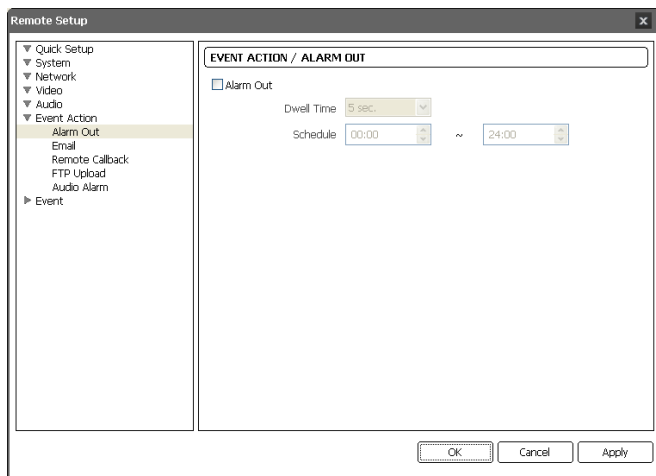

Check the **Alarm Out** box to activate alarm out.

- **Dwell Time:** Select the alarm-out dwell time. An alarm out is activated for the preset dwell time after detecting an event.
- **Schedule:** Set up the period to enable alarm out. An alarm out can be activated only during this period.

Email

The screenshot shows the 'Remote Setup' window with the 'EVENT ACTION / EMAIL' tab selected. On the left is a tree view with categories: Quick Setup, System, Network, Video, Audio, Event Action, Alarm Out, Email (highlighted), Remote Callback, FTP Upload, Audio Alarm, and Event. The main area contains the following fields:

- ☐ Email
- SMTP Server: [Text Field]
- Port: [25] (dropdown)
- ☐ Use SSL/TLS
- Authentication: ID [Text Field], Password [Text Field]
- Sender: [Text Field]
- Recipient(s): [Text Field] [Add]
- Recipient List: [List Box] [Remove]

At the bottom are buttons for OK, Cancel, and Apply.

Check the **Email** box to send an email.

- **SMTP Server, Port:** Enter the IP address or domain name and port number of the SMTP server attained from your network administrator. You can use the domain name instead of the IP address if you set up the DNS server when setting up the network. Select **Use SSL/TLS** if the SMTP server requires SSL (Secure Sockets Layer) authentication.
- **Authentication:** Enter the ID and password if the SMTP server requires user authentication.
- **Sender, Recipient:** Enter the sender's and recipients' (max. 10) email addresses. An email address must include the "@" character to be a valid address.

Remote Callback

Remote Setup

▼ Quick Setup
 ▼ System
 ▼ Network
 ▼ Video
 ▼ Audio
 ▼ Event Action
 Alarm Out
 Email
 Remote Callback
 FTP Upload
 Audio Alarm
 ► Event

EVENT ACTION / REMOTE CALLBACK

☐ Remote Callback

	IP Address	Port (8000~12000)
1	.	8201
2	.	8201
3	.	8201
4	.	8201
5	.	8201


Retry: 5

OK Cancel Apply

Check the **Remote Callback** box to send a callback message to remote systems (Not supported for the WebGuard program).


- **IP Address, Port:** Enter the IP addresses and port numbers of the remote systems to send a message.
- **Retry:** Select the number of times to try sending a message if it fails to send.

FTP Upload

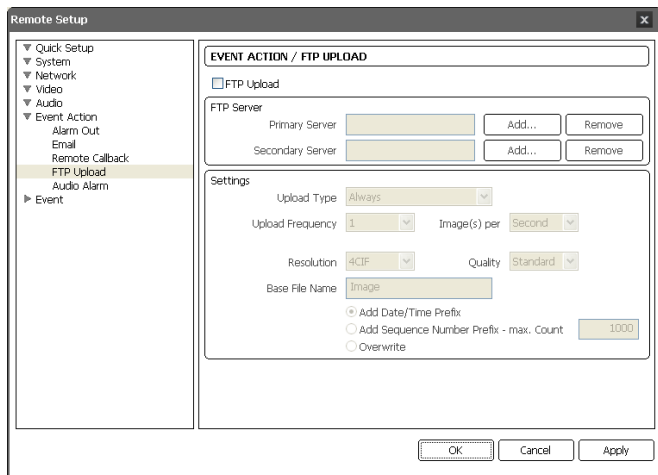

Check the **FTP Upload** box to upload event detected images in JPEG file format to an ftp server.

- **FTP Server:** Click the **Add** button to register an ftp server. Clicking the **Remove** button deletes the registered ftp server. When an event is detected, the event detected images will be uploaded in JPEG file format to the ftp server registered as a primary server. If images fail to be uploaded to the primary server, they are uploaded to the secondary server until uploading to the secondary server fails.

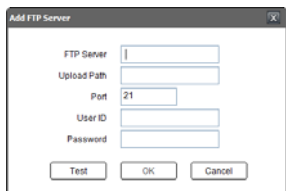

- **FTP Server:** Enter the IP address (or domain name) of the ftp server.
- **Upload Path:** Enter the folder path to upload files. Special characters (\ # * | : " < > ?) cannot be used in the folder path.
- **Port:** Enter the port number of the ftp server.
- **User ID, Password:** Enter the user ID and password for the connection to the ftp server.

Click the **Test** button to check the connection to the ftp server with the information set above. When the test succeeds, click the **OK** button.


- **Settings:** Set up the image and upload settings for ftp upload.
 - **Upload Type:** Select the upload type. When the upload type is set to **Always**, images will be uploaded to the ftp server according to the settings below regardless of the event detection. When the upload type is set to **Event**, images will be uploaded to the ftp server according to the settings below when events are detected.

- **Upload Frequency:** Displays only when the upload type is set to **Always**. Set up the upload rate, and the preset number of images will be uploaded to the ftp server during the preset time.
- **Upload 1 image per:** Displays only when the upload type is set to **Event**. Set up the upload rate. Selecting **Upload for** allows you to set how long after an event is detected that event detected images will be uploaded and at what upload rate. Selecting **Upload while event status is active** uploads event detected images at the upload rate while an event is detected.
- **Resolution, Quality:** Select the resolution and quality of the images to be uploaded to the ftp server. The resolution cannot exceed that of the primary stream.
- **Base File Name:** Enter the common file name of the images to be uploaded to the ftp server and select the option to distinguish each image file. Special characters (\ / # * | : " < > ?) cannot be used in the file name. Selecting **Add Date/Time Prefix** adds the event detection date and time to each image file name. Selecting **Add Sequence Number Prefix – max. Count** adds the sequence number according to the event detection order to each image file name. Selecting **Overwrite** overwrites the previous image file. The event type is added to the image file name automatically.

NOTES:

- When in the dual stream mode, the resolution and quality settings of the secondary stream will be used.
- Consider the performance of the FTP server when setting up the upload rate during the *Upload Frequency* or *Upload 1 image per* setting. The FTP upload might fail if the upload rate exceeds the performance of the FTP server.

Audio Alarm

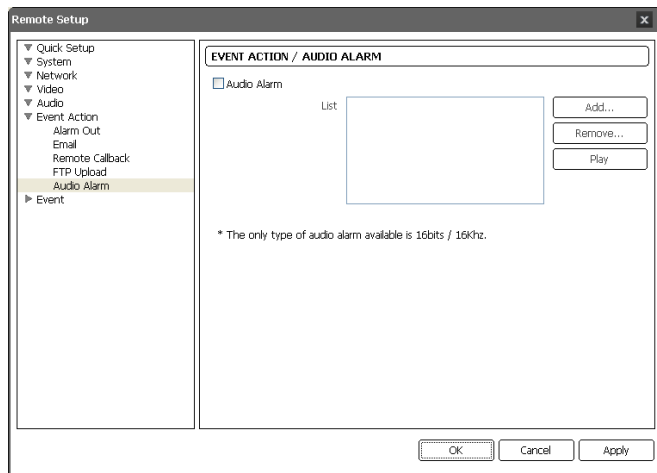


Check the **Audio Alarm** box to sound by playing back an audio file.

- **List:** Displays the audio file to be played back. You can add or delete an audio file (.wav) (16 bits/16 KHz encoded file only) by clicking the **Add** or **Remove** button. Selecting an audio file in the list and clicking the **Play** or **Stop** button allows you to test the sound by playing back the selected audio file.


NOTE: Audio files cannot exceed a total of 6MB.

3.7 Event

You can set up event detection function.

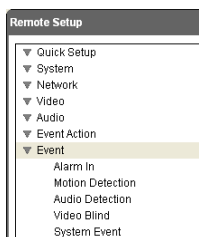

Alarm In

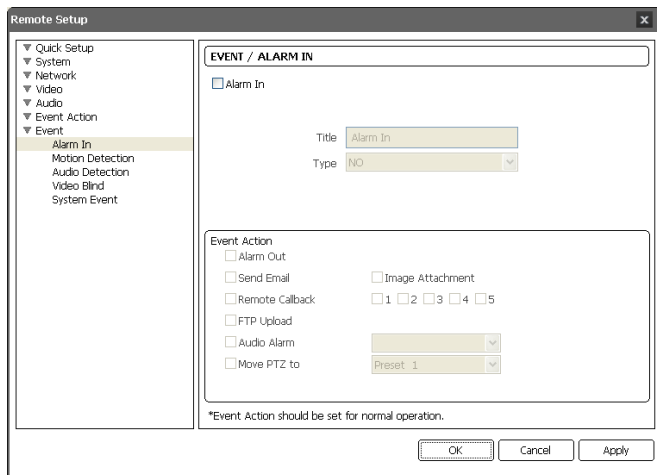

Check the **Alarm In** box to set up an alarm-in event. When the camera senses an input on the alarm input connector, it considers it as an event.

- **Title:** Enter the alarm-in device's name.
- **Type:** Select the alarm-in type.
- **Event Action:** Check the box for each action the camera will take whenever it detects an alarm-in event.
 - **Alarm Out:** Check the box to trigger an alarm-output signal.
 - **Send Email:** Check the box to send an email. Selecting **Image Attachment** attaches an event detected image file (.JPG) to the email.
 - **Remote Callback:** Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - **FTP Upload:** Check the box to upload images to an ftp server.
 - **Audio Alarm:** Check the box and select the audio file (.wav) to sound.
 - **Move PTZ to:** Select the desired preset number that you want the camera to move to. You must set preset locations for the camera using remote programs.

NOTE: You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

Motion Detection

Remote Setup

▼ Quick Setup
 ▼ System
 ▼ Network
 ▼ Video
 ▼ Audio
 ▼ Event Action
 ▼ Event
 Alarm In
 Motion Detection
 Audio Detection
 Video Blind
 System Event

EVENT / MOTION DETECTION

☐ Motion Detection

Sensitivity Daytime Nighttime

Minimum Blocks for Detection Daytime Nighttime

Motion Zone

Motion Ignoring Interval

Daytime ~

Event Action

☐ Alarm Out

☐ Send Email ☐ Image Attachment

☐ Remote Callback ☐ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5

☐ FTP Upload






☐ Audio Alarm

☐ Move PTZ to

*Event Action should be set for normal operation.


Check the **Motion Detection** box to set up a motion detection event. When the camera detects a motion in a configured motion detection zone, it considers the motion as an event.

- **Sensitivity:** Set the motion sensitivity for daytime and nighttime independently. The higher the number is, the more sensitive it is.

- **Minimum Blocks for Detection:** Adjust the minimum number of detection blocks that must be activated in order to be considered as a motion event for daytime and nighttime independently.
- **Motion Zone:** Click the **Setup...** button and a motion detection zone setup screen appears. Define the area (max. four) of the image that you want to set up a motion detection zone by using the motion detection zone icons.
 -  (Select) or  (Clear): Click to select or clear a block for motion detection. You can select or clear the several blocks of an area using the mouse dragging.
 -  or  (One or All block): Click to select or clear one or all blocks at a time.
 -  (Area): Click to select or clear several blocks of an area.
- **Motion Ignoring Interval:** Select the motion ignoring dwell time from the drop-down list. The camera will not send notifications of motion events occurring during the preset interval after a motion is detected. You can control excessive remote notifications of motion detection events by adjusting the motion ignoring dwell intervals.
- **Daytime:** Set up the daytime range. The camera will consider the remaining time range as the nighttime.
- **Event Action:** Check the box for each action the camera is to take when it detects a motion detection event.
 - **Alarm Out:** Check the box to trigger an alarm-output signal.
 - **Send Email:** Check the box to send an email. Selecting **Image Attachment** attaches an event detected image file (.JPG) to the email.
 - **Remote Callback:** Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - **FTP Upload:** Check the box to upload images to an ftp server.
 - **Audio Alarm:** Check the box and select the audio file (.wav) to sound.
 - **Move PTZ to:** Select the desired preset number that you want the camera to move to. You must set preset locations for the camera using remote programs.

NOTE: You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

Audio Detection

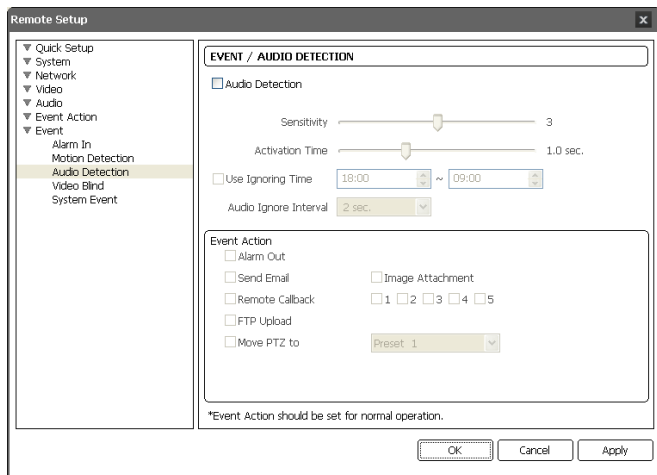


Check the **Audio Detection** box to set up an audio detection event. When the camera detects audio during the preset activation time, it considers it as an event.

- **Sensitivity:** Set the audio sensitivity. The higher the number is, the more sensitive it is.
- **Activation Time:** Adjust the duration that audio should last to be considered as an audio-in event. The camera will not consider any audio as an audio-in event if it lasts less than the preset time.
- **Use Ignoring Time:** Set up the event ignoring time. The camera will not consider audio that occurs during the preset time span as an event.
- **Audio Ignoring Interval:** Select the audio ignoring dwell time from the drop-down list. The camera will not send notifications of audio events occurring during the preset interval after an audio is detected. You can control excessive event logging and remote notifications of audio detection events by adjusting the audio ignoring dwell intervals.
- **Event Action:** Check the box for each action the camera is to take when it detects an audio-in event.
 - **Alarm Out:** Check the box to trigger an alarm-output signal.
 - **Send Email:** Check the box to send an email. Selecting **Image Attachment** attaches an event detected image file (.JPG) to the email.
 - **Remote Callback:** Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - **FTP Upload:** Check the box to upload images to the ftp server.
 - **Move PTZ to:** Select the desired preset number that you want the camera to move to. You must set up preset locations of the camera using remote programs.

NOTE: You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

Video Blind

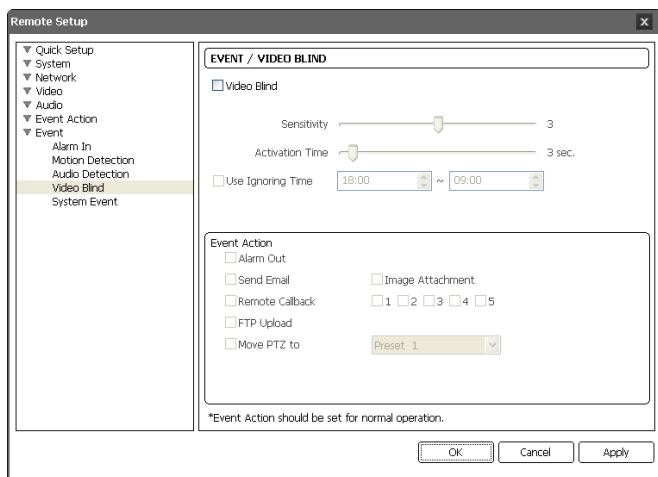

Check the **Video Blind** box to set up a video blind event. When the camera detects that more than 70% of a camera is blinded by anything, it considers the video blind as an event.

- **Sensitivity:** Adjust the sensitivity for the video blind. The higher the number is, the more sensitive it is.
- **Activation Time:** Adjust the duration that a video blind should last to be considered a video blind event. The camera will not consider any video blind as a video blind event if it is shorter than the preset time.
- **Use Ignoring Time:** Set up the event ignoring time. The camera will not consider video blind that occurs during the preset time span as an event.
- **Event Action:** Check the box for each action the camera will take whenever it detects a video blind event.
 - **Alarm Out:** Check the box to trigger an alarm-output signal.
 - **Send Email:** Check the box to send an email. Selecting **Image Attachment** attaches an event detected image file (.JPG) to the email.
 - **Remote Callback:** Check the box and select the remote systems to send a message (Not supported for the WebGuard program).
 - **FTP Upload:** Check the box to upload images to the ftp server.
 - **Move PTZ to:** Select the desired preset number that you want the camera to move to. You must set up preset locations of the camera using remote programs.

NOTES:

- Video blind events might NOT be detected for a camera with a very noisy image especially when set for low Sensitivity values.
- You must properly configure the settings related to each event action when setting them up to enable event actions. Refer to the *Event Action* setup.

System Event

The screenshot shows the 'Remote Setup' window with the 'System Event' option selected in the left sidebar. The main area is titled 'EVENT / SYSTEM EVENT' and contains two sections: 'System Alive' and 'Alarm In Bad'. Each section has an 'Interval' dropdown menu, a 'Send Email' checkbox, and a 'Remote Callback' checkbox with five radio button options (1, 2, 3, 4, 5). The 'System Alive' section has 'Interval' set to '1 hr.'. At the bottom right are 'OK', 'Cancel', and 'Apply' buttons.

Check the **System Event** box to set up a system event. The camera checks and reports the system and alarm-in status.

- **System Alive:** Check the box to check the system operation, and select the check interval.
 - **Send Email:** Check the box to send an email when the system is operating.
 - **Remote Callback:** Check the box and select the remote systems to send a message when the system is operating (Not supported for the WebGuard program).
- **Alarm In Bad:** Check the box to check the alarm-in operation and select the check interval.
 - **Send Email:** Check the box to send an email when there is no change of alarm-in event status.
 - **Remote Callback:** Check the box and select the remote systems to send a message when there is no change of alarm-in event status (Not supported for the WebGuard program).

NOTE: You must properly configure the *Email* and *Remote Callback* settings to send an email or a message. Refer to the *Event Action* setup.

Chapter 4 — Camera Module Setup

Device Menu allows you to change camera module settings by using remote programs (RASplus or iNEX Basic). Run a remote program and enter the PTZ mode. Click the Advanced Menu icon, and the PTZ Advanced Menu screen appears.




- **Speed:** Allows you to select the speed of pan, tilt and zoom operation. When it is set to 7 or lower, the direction icons in the PTZ control toolbar might not work in the Device Menu.
- **Auto Pan:** Clicking the button and selecting On performs the function set to Scan01. You can set up the function in Function – Scan menu of the Device Menu.
- **Tour:** Clicking the button after selecting a number and selecting On performs the function set to the tour number. You can set up the function in Function – Tour menu of the Device Menu.
- **Pattern:** Clicking the button after selecting a number and selecting On performs the function set to the pattern number. You can set up the function in Function – Pattern menu of the Device Menu.
- **Device Menu:** Click the button and select On, and the MAIN MENU is overlapped on the screen. See the following explanation for details.
- **Move to Origin:** Selecting a number in the No. list and clicking the button while setting up each function of the Device Menu deletes the function set to the number.
- **Enter:** Saves the change when the Title is changed while setting up each function of the Device Menu.
- **Esc:** Cancels the change when the Title is changed while setting up each function of the Device Menu.

NOTE: The *PTZ Advanced Menu* screen may be different depending on the remote program or its software version.


The following icons in the PTZ control toolbar will be used while setting up each function of the Device Menu.

- (Previous): Displays the MAIN MENU or moves to the previous menu.
- (Direction): Moves the camera in the Edit mode. Clicking the or icon moves to other menus and icon moves to a subordinate menu during the menu setup. They might not work if the Speed is set to 7 or lower in the PTZ Advanced Menu.
- **Zoom icons:** Changes the setting value or enters the Edit mode during the menu setup, or zooms in or out in the Edit mode.
- **Focus icons:** Focuses far or near during the menu setup or applies the current setting in the Edit mode.

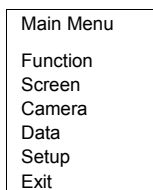


4.1 Function

The Function menu sets up functions of camera movement such as Preset, Pattern, Scan or Tour.

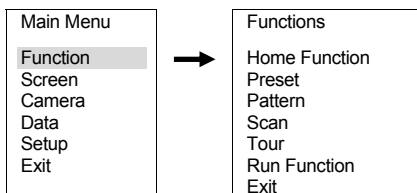

Home Function

The menu predefines a function to run when the PTZ camera is not controlled for the preset time.

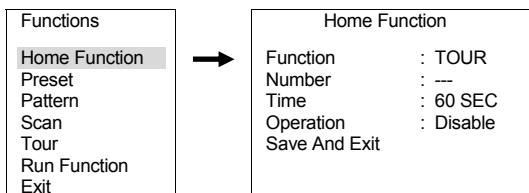

- **Function:** Sets the function to run.
- **Number:** Sets the function number to run.
- **Time:** Sets the idle time. The selected function starts to run when the PTZ camera is not controlled for the idle time.
- **Operation:** Sets whether or not to enable or disable the selected function.
- **Save And Exit:** Saves the change and exits the menu.

Preset

The menu sets up the Preset function which moves the camera to the preset position.

1. Enter the menu as follows:

Functions		Preset
Home Function		No. F I B W Title
Preset	→	001 A A F F xxxxxxxxxxxxxxxx
Pattern		002 MMOO -----
Scan		003 --- -----
Tour		004 --- -----
Run Function		005 --- -----
Exit		006 --- -----
		007 --- -----
		008 --- -----
		Prev Next
		Save And Exit

- **No.:** Indicates the Preset number (max. 240). It is supported also in a remote program to set up the Preset number 1 to 16. Selecting a number in the list and clicking the **Move to Origin** button deletes the function set to the number.
 - **FIB:** Sets focus, IRIS, BLC (Back Light Compensation) and WDR modes.
 - F (Focus), I (IRIS): Select A (Auto) or M (Manual).
 - B (BLC), W (WDR): Select O (enable) or F (disable).
 - **Title:** Enters a preset name by using the Zoom, Focus or Direction icons. Clicking the **Enter** or **Esc** button in the PTZ Advanced Menu screen saves or cancels the entering.
 - **Prev, Next:** Moves to the previous or next Preset number.
 - **Save And Exit:** Saves the change and exits the menu.
2. Move to the desired Preset number by using the Direction icons.
 3. Enter the Edit mode by clicking the Zoom icon.
 4. Move the camera to the desired position.
 5. Save the current position by clicking the Focus icon.
 6. Set up FIBW (focus, IRIS, BLC and WDR) by using the Zoom icon.
 7. Enter the title by using the Zoom icon.
 8. Move to the Save And Exit menu and click the ► (Direction) icon.

Pattern

The menu sets up the Pattern function which moves the camera according to the preset path.

1. Enter the menu as follows:


Functions		Pattern Setup
Home Function		No. : Title sec
Preset	→	001 : : Pattern01 006
Pattern		002 : : Pattern02 007
Scan		003 : : -- 000
Tour		004 : : -- 000
Run Function		Total : 013
Exit		Exit

- **No.:** Indicates a Pattern number. Selecting a number in the list and clicking the **Move to Origin** button deletes the function set to the number.
 - **Title:** Enters a name for the pattern by using the Zoom, Focus or Direction icons. Clicking the **Enter** or **Esc** button in the PTZ Advanced Menu screen saves or cancels the entering.
 - **sec:** Sets the time (sec.) how long it will take for the pattern to perform (max. 245 seconds).
 - **Total:** Displays the time of all patterns in total (max. 245 seconds).
 - **Exit:** Saves the change and exits the menu.
2. Move to the desired Pattern number by using ▲ and ▼ (Direction) icons.
 3. Enter the Edit mode by clicking the Zoom icon.
 4. Move the camera in the desired path.
 5. Save the current path by clicking the Focus icon.
 6. Enter the title by using the Zoom icon.
 7. Move to the Exit menu and click the ► (Direction) icon.

Scan

The menu sets up the Scan function which moves the camera between two positions in the preset speed.

1. Enter the menu as follows:

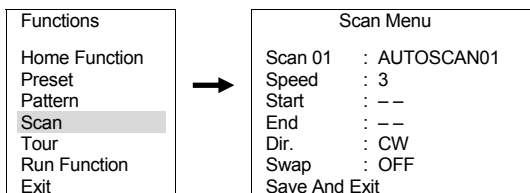


- **Scan 01 AUTOSCAN01:** Indicates the Scan number and name (max. 16 characters). You can change the name for the scan by using the Zoom, Focus or Direction icons. Clicking the **Enter** or **Esc** button in the PTZ Advanced Menu screen saves or cancels the entering.
 - **Speed:** Sets the scanning speed.
 - **Start, End:** Sets the coordinate of the position to start and end scanning.
 - **Dir (Direction):** Sets the scanning direction.
 - **Swap:** Swaps the starting and ending position of the scan.
 - **Save And Exit:** Saves the change and exits the menu. Moving to a scan number and clicking the **Move to Origin** button deletes the function set to the number.
2. Set the Scan number by using the ◀ and ▶ (Direction) icons.
 3. Enter the name by using the Zoom icon.
 4. Set up the speed by using the Zoom icon.
 5. Enter the Edit mode by clicking the Zoom icon to set up a starting position.
 6. Move to the starting position of the scan.

7. Save the current position by clicking the Focus icon.
8. Enter the Edit mode by clicking the Zoom icon to set up an ending position.
9. Move to the ending position of the scan.
10. Save the current position by clicking the Focus icon.
11. Move to the SAVE AND EXIT menu and click the ► (Direction) icon.

Tour

The menu sets up the Tour function which executes several functions in the predefined order.

1. Enter the menu as follows:

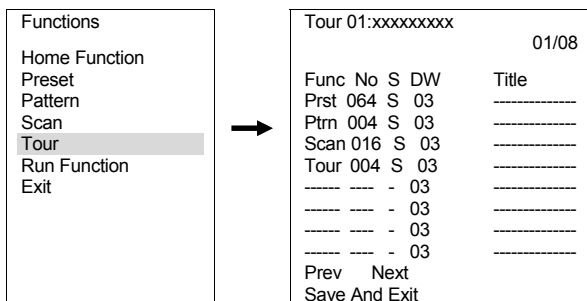

- Tour 01:xxxxxxx: Indicates the Tour number (max. 8) and name (max. 16 characters).
 - Func: Sets a function to be executed (PRST: Preset, PTRN: Pattern) (max. 8).
 - No: Sets the function number to be executed. Selecting a number in the list and clicking the Move to Origin button deletes the function set to the number.
 - S: Sets a speed for the function to be executed (F: Normal, M: Medium, S: Slowest).
 - DW: Sets a dwell time for the function to last (3 to 99 seconds).
 - Title: Displays the function's name.
 - Prev, Next: Moves to the previous or next function number.
 - Save And Exit: Saves the change and exits the menu.
2. Set up the Tour number by using the ◀ and ▶ (Direction) icons.
 3. Enter the Tour name by using the Zoom icon.
 4. Move to the Func list by using the ▲ and ▼ (Direction) icons.
 5. Set up the function. Clicking the Zoom icon sets up the Prst (Preset) function. If you want to set up another function, enable the function in the PTZ Advanced Menu screen.
 6. Select a number, speed and the dwell time of the function by using the Zoom icon.
 7. Move to the Save And Exit menu and click the ► (Direction) icon.

NOTES:

- All functions should be preset before being referred to in the tour menu. Otherwise functions won't be selectable when setting up tour.
- The Tour functions in the second level Tour will be ignored when called by the first level Tour. Refer to the following example:

[Ex.]

Tour 01: Preset 02, Preset 03, Tour 02, Tour 03

Tour 02: Preset 05, Preset 06, Tour 04, Preset 05

Tour 03: Preset 07, Preset 01

Tour 04: Preset 08, Preset 05, Pattern 01

- Tour 01 executes as follows:


Preset 02 → Preset 03 → Preset 05 → Preset 06 → Preset 05 → Preset 07 → Pattern 01 → ... (Repeat) (Tour 04 in Tour 02 will be skipped in Tour 01.)

- Tour 02 executes as follows:

Preset 05 → Preset 06 → Preset 08 → Preset 05 → Pattern 01 → Preset 05 → ... (Repeat)
(Tour 04 is still valid if called directly from Tour 02.)

Run Function

The menu runs the preset Home, Preset, Pattern, Scan, Tour and Auto Pan functions.

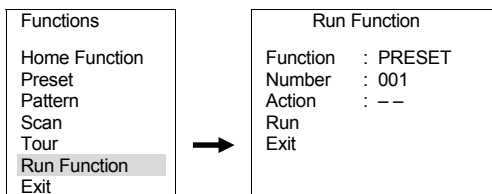


- **Function:** Sets the function to run.
- **Number:** Sets the function number to run.
- **Run:** Runs the selected function.
- **Exit:** Saves the change and exits the menu.

NOTE: The *Action* function is not supported.

4.2 Screen

The Screen menu sets up screen related settings.

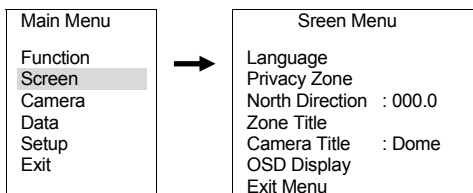


NOTE: The LANGUAGE menu function is not supported.

Privacy Zone

The menu allows you to restrict monitoring of specific areas for privacy reasons.

1. Enter the menu as follows:

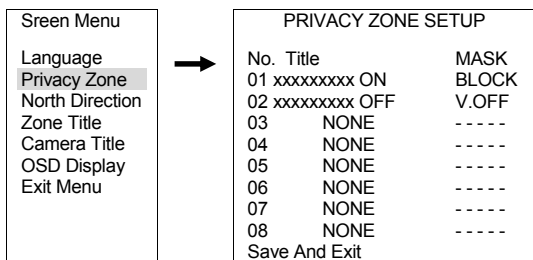



- **No:** Indicates a privacy zone number. Selecting a number in the list and clicking the **Move to Origin** button deletes the function set to the number.
 - **Title:** Enters the privacy zone name. Clicking the **Enter** or **Esc** button in the PTZ Advanced Menu screen saves or cancels the entering.
 - **Mask:** Sets the restriction level.
 - **Block:** Blocks the predefined area in the camera screen when the camera moves through the area.
 - **V.Off:** Does not display video at all in the camera screen while the camera moves the area.
 - **Save And Exit:** Saves the change and exits the menu.
2. Move to the desired number and enter the Edit mode by clicking the Zoom icon.
 3. Adjust the area by using the Direction icons.
 4. Save the current area by clicking the Focus icon. The privacy zone number is enabled and is set to ON.
 5. Enter the title by using the Zoom icon.
 6. Select the restriction level by using the Zoom icon.
 7. Move to the SAVE AND EXIT menu and click the ► (Direction) icon.

North Direction

The menu sets up the azimuth of the camera.

1. Enter the menu as follows:

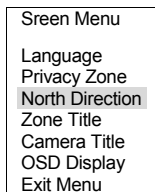





2. Enter the Edit mode by clicking the Zoom icon and adjust the north direction.
3. Save the current direction by clicking the Focus icon.
4. Move to the Save And Exit menu and click the  (Direction) icon.

Zone Title

The menu sections a view angle and names the sectioned angle. The name will be displayed on the screen in the corresponding sectioned angle.

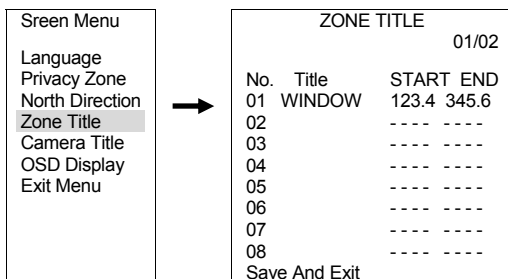1. Enter the menu as follows:




- **No:** Indicates a zone title number. Selecting a number in the list and clicking the Move to Origin button deletes the function set to the number.
 - **Title:** Enters the zone title name. Clicking the Enter or Esc button in the PTZ Advanced Menu screen saves or cancels the entering.
 - **Start, End:** Sets the starting and ending position of the angle (Starting position > Ending position).
 - **Save And Exit:** Saves the change and exits the menu.
2. Move to the desired zone title number by using the  and  (Direction) icons.
 3. Enter a title by using the Zoom icon.
 4. Enter the Edit mode by clicking the Zoom icon to set up a starting position.
 5. Move to the starting position of the angle.
 6. Save the current position by clicking the Focus icon.
 7. Enter the Edit mode by clicking the Zoom icon to set up an ending position.
 8. Move to the ending position of the angle.
 9. Save the current position by clicking the Focus icon.
 10. Move to the Save And Exit menu and click the  (Direction) icon.

Camera Title

The menu sets up the camera title.

1. Enter the menu as follows:

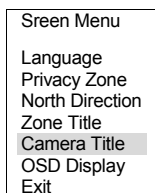


2. Enter a title by using the Direction or Zoom icon. Clicking the **Enter** or **Esc** button in the PTZ Advanced Menu screen saves or cancels the entering.

OSD Display

The menu enables or disables OSD display.


1. Enter the menu as follows:

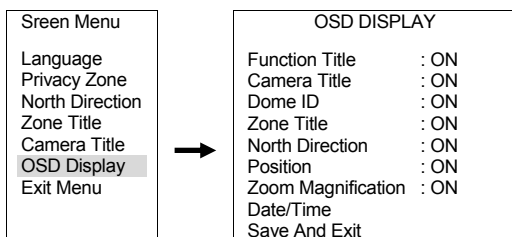

- **Function Title:** Enables or disables to display the Preset, Pattern, Scan and Tour title.
- **Camera Title:** Enables or disables to display the camera title.
- **Zone Title:** Enables or disables to display the Privacy Zone title.
- **North Direction:** Enables or disables to display the North Direction title.
- **Position:** Enables or disables to display the coordinate of the camera.
- **Dome ID:** Enables or disables to display the camera ID.
- **Zoom Magnification:** Enables or disables to display the current zoom magnification level.
- **Date/Time:** Enables or disables to display the date and time.
- **Save And Exit:** Saves the change and exits the menu.

4.3 Camera

The Camera menu sets up camera related settings.

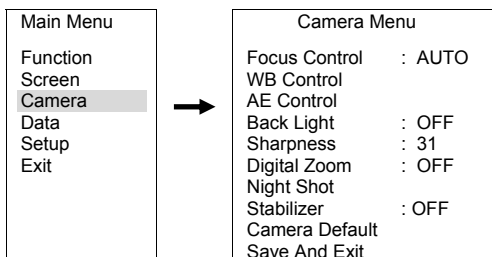


- **Focus Control:** Adjusts the focus of images.
 - **Mode:** Adjusts the focus automatically (**AUTO**) or manually (**MANUAL**). Do NOT set to **AUTO** under heavy movement condition for 24 hours to prevent the lifespan of the lens from being shortened.
 - **AF Sensitivity:** Sets the auto focus sensitivity. Set to **NORMAL** in conditions with many motions and to **LOW** in conditions with few motions.
- **WB Control:** Adjusts the white balance of images.
 - **Manual:** Adjusts the white balance manually.
 - **Auto:** The system identifies the light source of where the camera is installed and sets the proper white balance for the conditions automatically. If the installation environment or lighting changes, this setting must be adjusted. It is recommended to use this function in normal use.
 - **One Push:** Allows you to set the proper white balance for the current lighting on the basis of the white color in the current image. If the installation environment or lighting changes, this setting must be adjusted.
 - **Outdoor, Indoor:** Allows you to set the proper white balance for outdoor or indoor condition.
 - **ATW (Auto Tracking balance Control):** The system monitors the color temperature of images continuously and sets the proper white balance automatically depending on the color temperature.
 - **Outdoor Auto:** Adjusts the proper white balance for outdoor condition automatically depending on the lighting change.
 - **Sodium Auto:** Adjusts the proper white balance for the lighting using sodium light sources such as sodium lamps automatically depending on the lighting change.
 - **Sodium Fixed:** Allows you to set the proper white balance for the lighting using sodium light sources such as sodium lamps.
- **AE Control:** Adjusts the exposure of images.
 - **Mode:** Sets the AE control mode.
 - **Full Auto:** Controls the IRIS, gain, brightness and shutter speed automatically.
 - **Manual:** Controls the gain and shutter speed manually.
 - **IRIS Prio (IRIS Priority):** Controls the IRIS manually.
 - **Shutter Prio (Shutter Priority):** Controls the shutter speed manually.
 - **Brightness:** Controls the brightness manually.
 - **Slow Shutter:** Setting to ON decreases the electronic shutter speed automatically during low light conditions so that images are displayed bright even though the lighting is dim.
 - **IRIS:** Adjusts the IRIS F-number. This works only in the **MANUAL** or **IRIS PRIO** mode.

- **Gain:** Adjusts the gain value. This works only in the **MANUAL** mode.
- **Bright:** Adjusts the brightness. This works only in the **BRIGHT** mode.
- **IRIS VALUE:** Adjusts the IRIS value when the camera is set up to adjust the IRIS manually.
- **Shutter Speed:** Adjusts the shutter speed. This works only in the **MANUAL** or **SHUTTER PRIO** mode.
- **WDR Mode:** Setting to ON provides images of both the background and object overall clearly.
- **Back Light:** Enables the backlight compensation and subjects in front of bright backgrounds will be clearer.
- **Sharpness:** Adjusts the sharpness of images. The higher the value is, the more the outlines of the image will be enhanced (0 ~ 31).
- **Digital Zoom:** Zooms in images digitally up to 2x, 4x, MAX respectively.
- **Night Shot:** Enables or disables the IR cut filter.
 - **Manual:** Enables or disables the IR cut filter manually by changing the **Local Control** setting to **Color** or **B&W** (Black and White).
 - **AUTO:** Disables the IR cut filter and enters B&W mode automatically at low light.
- **Stabilizer:** Reduces blurring caused by camera shake that results from external conditions such as the wind.
- **Camera Default:** Returns all the settings of the Camera menu to the original factory settings.

4.4 Data


The Setup menu sets up data related settings.

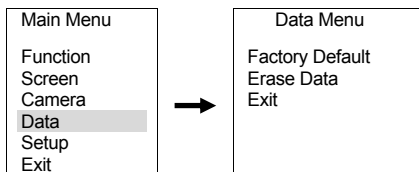

- **Factory Default:** Returns all settings of the camera module setup to the original factory settings.
- **Erase Data:** Returns all settings of the camera module setup except **Camera** and **Setup** menus to the original factory settings.
- **Exit:** Exits the menu.

4.5 Setup

The Setup menu sets up screen related settings.

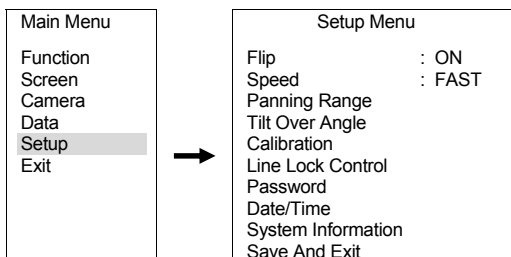

- **Flip:** When the camera is mounted on a ceiling, it can prevent a moving object from being seen reversed.
 - **ON:** When the camera tracks a moving object and the moving object is seen reversed in a certain angle, the camera flips the image digitally.
 - **OFF:** When the camera tracks a moving object and the moving object goes to the area at which angle the object is seen reversed, the camera stops tracking the moving object. Functions of camera movement such as Preset, Pattern or Tour need to be set up again if the Flip setting is changed to OFF after the functions of camera movement have been set up; otherwise, the functions of camera movement might not work properly.
- **Speed:** Sets the movement speed of the camera when using the Direction icons and moving the camera manually.
- **Panning Range:** Limits the panning range. It will be used when the camera is installed near a wall or on a corner.
- **Tilt Over Angle:** Limits the tilt range. It will be used when the view angle is blocked by a bottom cover or wall.
- **Calibration:** Adjusts the calibration.
 - **Origin Reset:** Calibrates the origin point of the factory default.
 - **Origin Position Move:** Changes the origin point as a user defines. Setting ACTIVE OFFSET to ENABLE allows you to change the origin point.
 - **Origin Offset:** Enables or disables the user-defined origin point. ENABLE applies the user-defined origin point and DISABLE applies the origin point of the factory default.
 - **Auto Calibration:** When the position error is detected, it recovers the calibration automatically according to the ACTIVE OFFSET setting.
- **Password:** Sets a password (up to four characters). The default password is 9999.
- **Date/Time:** Sets the date and time of the camera module.
- **SYSTEM INFORMATION:** Displays system information of the camera module.

NOTE: The Line Lock Control function is not supported.

Chapter 5 — WebGuard

You can monitor live video images from the camera on the web browser by using the WebGuard program.

Computer system requirements for using WebGuard are:


- Operating System: Microsoft® Windows® XP x86 (32 Bit) (Service Pack 3), Microsoft® Windows® Vista x86 (32 Bit) (Service Pack 1) or Microsoft® Windows® 7 x86 (32 Bit)
- CPU: Intel Pentium III (Celeron) 600MHz or faster (Core 2 Duo E4600 recommended)
- RAM: 128MB or more (2GB recommended)
- VGA: 8MB or more (128MB recommended) (1024x768, 24bpp or higher)
- Internet Explorer: Version 6.0 or later

Start Internet Explorer on your local PC. You can run the WebGuard program by entering the following information in the address field.

- “http://IP address:port number” (The camera IP address and the WebGuard port number set during the port setup)
- Or, “http://DVRNS server address/camera name” (The DVRNS server address and the camera name registered on the DVRNS server)

NOTES:

- Enter *https* instead of *http* if you have checked the *Use HTTPS* box during the WebGuard port number setup. Click *Continue to this website (not recommended)* when the security certificate warning page is displayed. When the WebGuard login page is not displayed, check Internet option settings as follows:
 - Go to *Tools*, then *Internet Options*, and then the *Security* tab → Click the *Custom level...* button → Set the setting of *Reset custom settings* to *Medium-high (default)* or *Medium*.
 - Go to *Tools*, then *Internet Options*, and then the *Advanced* tab → Check the *Use TLS 1.0* box under the *Security* option.
- You do not need to enter the WebGuard port number if the WebGuard port number is set to 80 (443 when entering *https*) when running the WebGuard program by entering the IP address and port number.

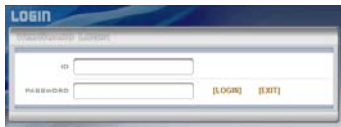





Enter your ID and PASSWORD and click the [LOGIN] button.


NOTE: WebGuard only works with Microsoft Internet Explorer and will NOT work with other web browsers.




NOTES:



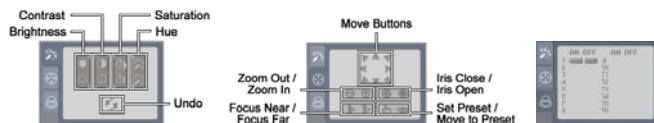


- There might be a problem with the bottom of the WebGuard page being cropped caused by the address or status bars in Microsoft Internet Explorer 7.0. In this situation, it is recommended that websites open windows without address or status bars by changing Internet setting. (Go to *Tools*, and *Internet Options*, and then the *Security* tab → Click the Custom level... button → Select *Enable* for the *Allow websites to open windows without address or status bars* option.)
- When running WebGuard in the Microsoft® Windows® Vista or later operating system, it is recommended that you start Internet Explorer with elevated administrator permissions. Click the right mouse button on the Internet Explorer icon and select the *Run as administrator* option from the context menu. Otherwise, some functions of WebGuard might be limited.
- There might be a problem with screen display or screen update caused by low image transmission speed when using the Microsoft® Windows® Vista or later operating system. In this situation, it is recommended that you disable the Auto Tuning capability of your computer. Run the *Command Prompt* with elevated administrator permissions (Go to the *Start Menu*, and *Accessories*, and then *Command Prompt* → Click the right mouse button and select the *Run as administrator* option). Then enter "netsh int tcp set global autotuninglevel=disable" and press the enter key. Restart your computer to apply the changes. If you want to enable the Auto Tuning capability again, enter "netsh int tcp set global autotuninglevel=normal" after running the Command Prompt with elevated administrator permissions. Restart your computer to apply the changes.
- When running the updated WebGuard for the first time, Internet Explorer might occasionally load the information from the previous version. In this case, delete the temporary Internet files by selecting *Tools* → *Internet Options* → *General* tab, and then run WebGuard again.
- You will need to get the appropriate IP address for the camera you want to connect to and the WebGuard port number from your network administrator.



- ① **Log Out:** Click  to log out of the WebGuard program.
- ② **Version:** Position the mouse pointer on the WebWatch logo to see the WebGuard program version.
- ③ **Information:** The Information window displays the login information of WebGuard.
- ④ **Full Display:** Clicking the button displays the video in full screen. Pressing the **Esc** button on a keyboard returns to the previous screen.
- ⑤ **Camera Button:** The button displays the camera number.
- ⑥ **Image Adjustment:** Click  to adjust the brightness, contrast, saturation and hue of monitored image.
- ⑦ **PTZ Control:** Click  to control pan, tilt and zoom remotely.
- ⑧ **Alarm-Out Control:** Click  to control an alarm out device remotely.




- ⑨ **Setup:** Click  to set up the image drawing mode and OSD display. You can adjust the display speed by changing the image drawing mode, and select OSD information to be displayed on the screen.
- ⑩ **Save Image:** Click  to save the current image as a bitmap or JPEG file format.
- ⑪ **Remote Setup:** Click  to change the settings of the camera by using the Remote Setup screen.
- ⑫ **Event Status Window:** The event status window at the bottom displays a list of events that were detected in the camera.

 /  Alarm In On/Off  Motion Detection  Video Blind  Audio Detection

- ⑬ **Screen Popup Menu:** Clicking the right mouse button on the screen displays the screen popup menu.




- **Change Camera Title:** Select to change the camera title.
- **Enable Audio:** Select the menu and click the  button to monitor live audio from the site which the camera is installed through the attached speaker.
- **Aspect Ratio:** Select to change the image aspect ratio displayed on the screen and the option menu appears. Selecting **Fit to Screen** displays images by fitting them to the screen size. Selecting **Original Ratio** displays images by fitting them to the screen size while maintaining their original ratio. Selecting **Half Size (x0.5)** to **Quadruple Size (x4)** displays the images at the selected image size.
- **Trim The Black (noise) Edges:** Trims the black line (noise) displayed at the edge of the image.
- **Multistream:** Select to choose the desired stream if the camera is in dual stream mode.
- **Deinterlacing:** Select to enhance image display quality of interlaced video on the screen by eliminating horizontal scan lines or noise in areas with motion.
- **Anti-Aliasing Screen:** Select to enhance image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTES:

- The image adjustment for the monitoring screen works only in the pause mode.
- A camera name change in the Web Watch mode does not affect the camera name set up on the camera. Leaving the Camera Title blank causes the camera name set up on the camera to display.
- *Aspect Ratio – Half Size (x0.5) to Aspect Ratio to Quadruple Size (x4)* in the Screen Popup Menu will be enabled when the selected camera screen can display images in those sizes.

Appendix

Map of Screens (Remote Setup)

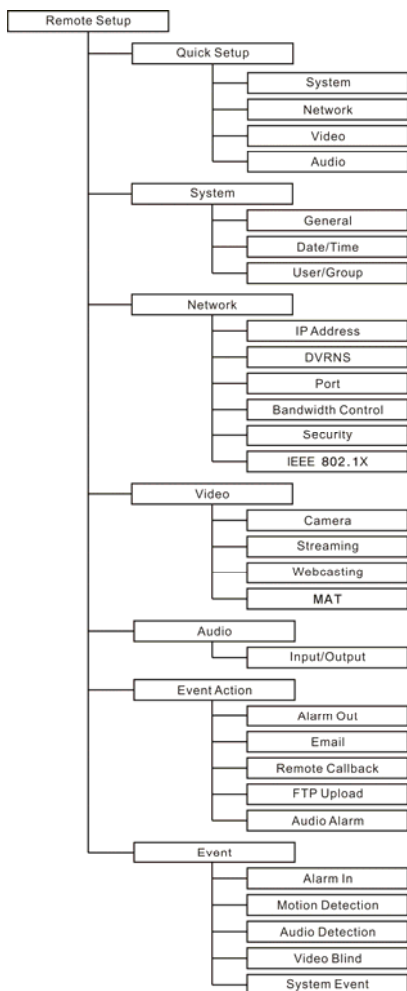

Troubleshooting

Problem	Possible Solution
No Power	<ul style="list-style-type: none"> • Check power cord connections. • Confirm that there is power at the outlet.
No Live Video	<ul style="list-style-type: none"> • Confirm that the camera has power. • Check network connections on your PC and a camera.
Live video is not clear.	<ul style="list-style-type: none"> • Check if there is dust or dirt on the lens and clean the lens with a clean cotton cloth or brush. • Check that the focus is set correctly. • Check that the lighting and adjust the camera position or angle if bright light is shining directly into the lens.
Video color appears incorrect.	Check that the white balance setting during the camera module setup.
Video flickers.	Check to see if the camera points directly at the sun or a fluorescent light and adjust the camera's direction.
Connection to the INIT program is not available because of wrong ID and password.	If you lost the administrator ID and password, do a factory reset and customize all settings all over again. The factory reset returns all the settings including network settings to the original factory settings. Write down the password just in case.
The WebGuard program is not available.	If you cannot launch the login page of the WebGuard program, check Microsoft Internet Explorer's version. WebGuard might not run properly in versions earlier than 6.0.

Specifications

LENS	
Lens Type	36x Optical zoom with auto focus
Focal Length	F1.6 to F4.5, f=3.4 mm to 122.4 mm
Angle View	57.8° (Wide) to 1.7° (Tele)
Lens Iris Control	DC auto iris
Day/Night Filter	Yes
CAMERA	
Image Sensor	1/4" CCD
Minimum Illumination	0.01 Lux @ F 1.6 (DSS)
Scanning Mode	Interlaced scan
SNR	50 dB
Electronic Shutter	Auto
Angle	Pan: 360° (endless), Tilt: 0° to 180°
Speed	Pan/Tilt: 0.1° to 90°/s, Preset: 360°/s

VIDEO	
Video Signal	NTSC or PAL
Compression Algorithm	H.264, M-JPEG (Four levels)
Compression Resolution	CIF, 4CIF
Bitrate Control	H.264 – CBR / VBR (up to 6 Mbps)
Maximum Frame Rate (images per second)	30 ips + 30 ips @ 4CIF (25 ips + 25 ips for PAL)
Dual Stream	Live monitoring & Recording, Live monitoring
INPUTS/OUTPUTS	
Video Output*	1 Composite, 1 Vp-p
Audio Input	1 line in
Audio Output	1 line out
Alarm Input	1 TTL, NC/NO programmable, 4.3V (NC) or 0.3V (NO) threshold, 5 VDC
Alarm Output	1 relay out, NO only, 0.3A @ 125 VAC, 1A @ 30 VDC
Network Connectivity	10/100 Mbps Ethernet
CONNECTORS	
Video Output	Terminal block
Audio In/Out	Terminal block
Alarm In/Out	Terminal block
Ethernet Port	RJ-45
RS-485 Serial Port	Terminal block
GENERAL	
Dimensions (Ø x H)	5.9" x 8.2" (150mm x 209mm)
Shipping Dimensions (W x H x D)	8.3" x 11.0" x 8.3" (210mm x 280mm x 210mm)
Unit Weight	3.8 lbs. (1.72kg)
Shipping Weight	5.1 lbs. (2.3kg)
Operating Temperature	32°F to 113°F (0°C to 45°C)
Operating Humidity	0% to 90%
Power Supply	24 VAC
Power Consumption	Max. 20W
Approval	FCC, CE

* It is intended for video preview while adjusting the camera.

Specifications are subject to change without notice.

Index

A

Admin/Watch/Record Port 15

B

Bitrate Control 21

C

Camera Name 9, 14

Compression 21

D

Date/Time 11

DVR Name Service 14

DVRNS Server 14

F

Frame Rate 21

I

IP Filtering 18

M

MAT 23

N

Network Bandwidth Limit 17

O

ONVIF Protocol 10

Q

Quality 21

R

Resolution 21

RS485 ID 20

RTSP Port 15

S

SSL 18

Stream 21

T

Time Sync 11

U

Use HTTPS 15

Use UPnP 15

User/Group 11

W

WebGuard Port 15